

USER' S MANUAL

TFT LCD MONITOR WITH TV

viewpixé

Contents

1	Caution
2	Safety Information

3	Unit and Accessory
4	Front View
5-6	Remote Control Key Functions
7	Terminal board
8	Install and connect TV
9	Select Input Source & Basic Operation
10-16	Menu Operation

17	Help
18	Specifications



Caution



The lightening flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to the persons.



The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Correct disposal of this Product

Waste Electrical & Electronic Equipment (WEEE)

Your product is designed and manufactured with high quality materials and components which can be recycled and reused.

 
This symbol means that electrical and electronic equipment, at their end-of-life, should be disposed of separately from your household waste.

Please dispose of this equipment at your local community waste collection/recycling centre.


In the European Union there are separate collection systems for used electrical and electronic products. Please help us to conserve the environment we live in!



Warning

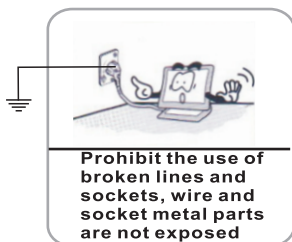

Warning

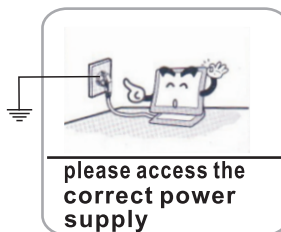 

* Power outlet must be grounded

Important Safety Precautions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments /accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.



- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.

Caution:

 
- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) The apparatus shall be disconnected from the mains by placing the power/standby switch in the standby position and unplugging the power cord of the apparatus from the AC mains receptacle.
- 16) The socket-out shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacture's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.

These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions. unless you are qualified to do so.


Unit and Accessories




TV set

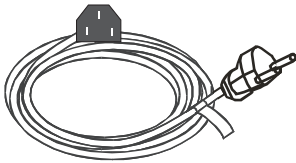

Main cable

 


User's Manual

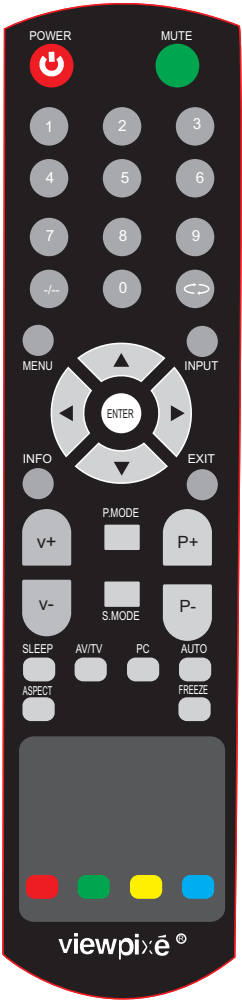 

Remote Control

 Front view

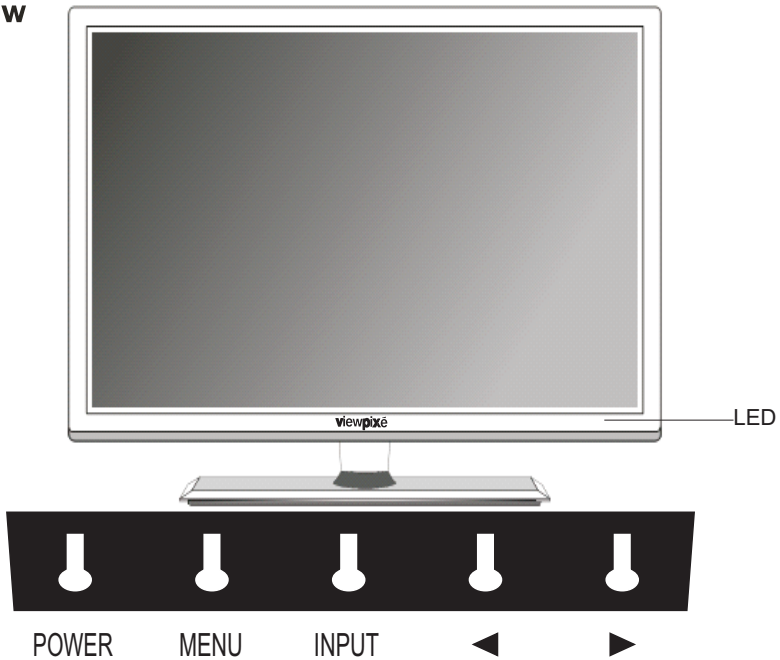

- (IR) Infrared Receiver: Receives IR signals from the remote control.
(Power on/Standby) LED Indicator: Press **POWER** to turn on and off,

Indicator on(Red)
Indicator on(Green)

Standby mode
Power on mode

The effective receiving scope for the signal is 5-8 meters from the front of the remote control window, and 30° to the left or right side and 20° above or below the control window.

- The functions of the buttons are described as bellows:

1. POWER

Set your TV to power on or standby mode.

2. MENU

Display the on-screen menu.

 
3. INPUT

Display input source.

4. ◀ ▶

Adjust the volume and move cursor left/right.

5. Remote Sensor

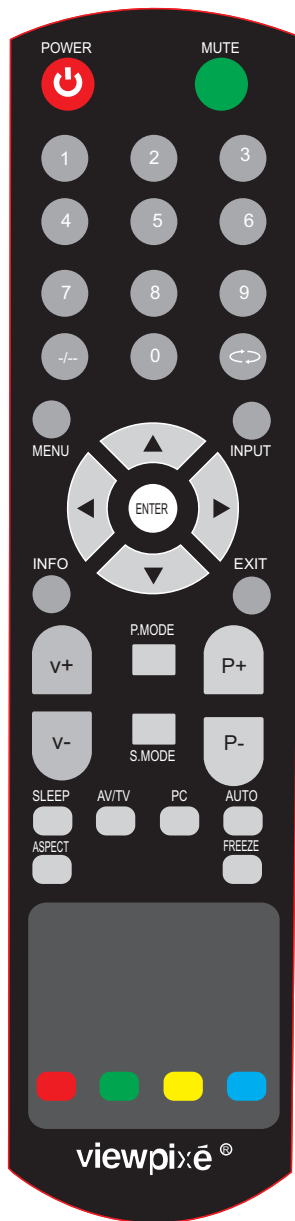

POWER

Press to turn TV set on or off.

In the standby mode, the indicator light will be red.
In the boot mode, the indicator light will be green.

MUTE

Press to mute sound; press again to restore sound.

0~9

Press any number of 0~9 buttons to select a TV channel.

AUTO

Press to auto adjust at PC source.



Return to previous TV channel.

MENU Press this button to switch on OSD menu or return to previous menu.

INPUT Press this button to select specific source such as TV, SV or other channel.

INFO Press the button to display the information about the program.

EXIT Press this button to exit.

◀▶▲▼ Menu button for left, right, up and down to move the cursor.

 
ENTER To confirm which you selected.

V+ V- Press this button to adjust volume.

P+ P- TV mode, press this button to select the following and above channel.

P. MODE Press this button to switch on picture mode.

S.MODE Press this button to switch on sound mode.

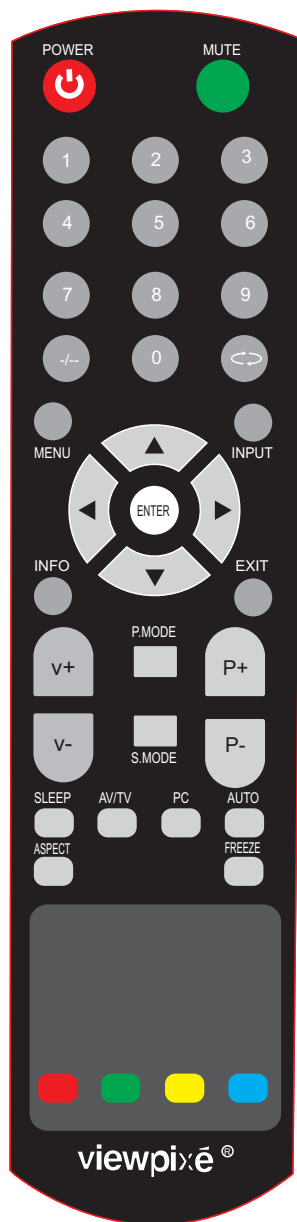

ASPECT Press the button to select the screen size and the ratio.

SLEEP Press this button to set sleep time.

 
FREEZE Press the button to pause the picture and press again the picture play.

USB Press the button to turn source to MEDIA quickly.

RED/GREEN/YELLOW/BLUE


These are TV channel edit keys.

Terminal board

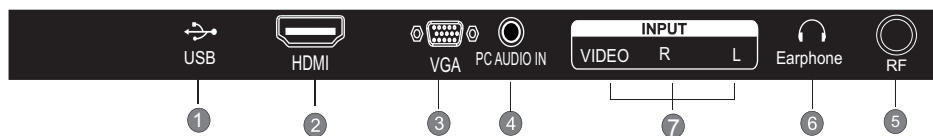


- | | |
|--------------------|------------------|
| 1). INTERFACE USB | 6). EARPHONE OUT |
| 2). HDMI INTERFACE | 7). CVBS INPUT |
| 3). PC INPUT | |
| 4). PC AUDIO INPUT | |
| 5). RF INPUT | |

 Side panel diagram

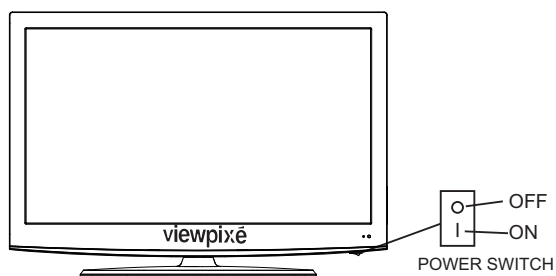

Install and connect TV

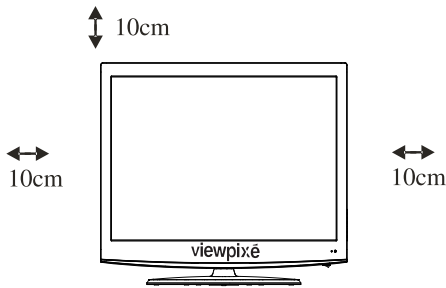 

Set your TV

 
To put your TV in a firm place which can bear the weight of the TV.

To avoid danger, please don't expose the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

Connect Antenna and power


1. Connect the antenna cable to the antenna socket on the side of the LCD TV and the your antenna socket.
2. To plug the power cord of TV (AC 100-240V~ 50/60Hz).

* Power outlet must be grounded

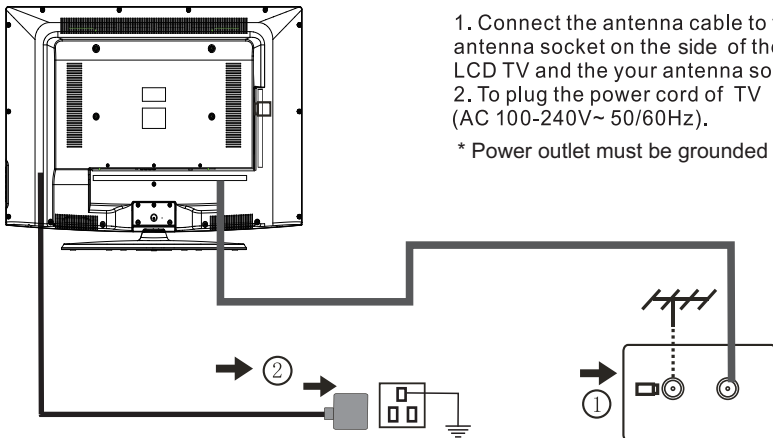

Turn On TV

 3. Press the standby button of the TV the indication light will turn to green. If the indicator is in standby mode (The Light is red), press the power button on the remote control or top of the TV.

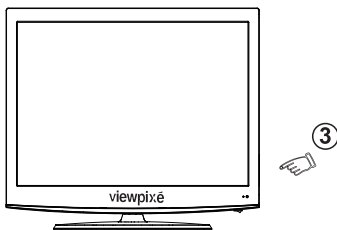

NOTE Picture for reference purposes only.

Select Input Source



 
Press **INPUT** button to display the input source list.

Press **▼** / **▲** button to select the input source you want to watch.

Press **ENTER** button to enter the input source.

Press **EXIT** button to quit.

Basic Operation

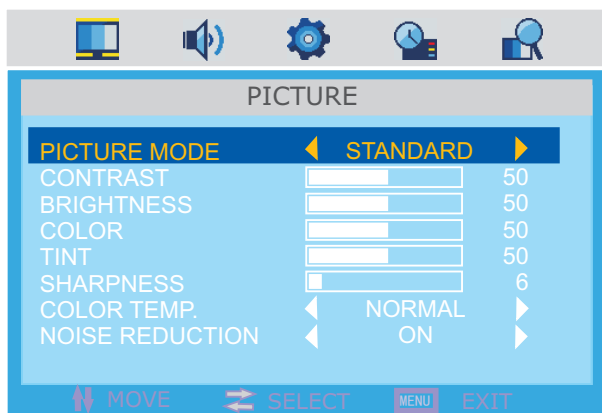

·Use **MENU** button to display the **MAIN OSD MENU**;

·Use **【▲】** / **【▼】** button to select the MENU you want;

 
·Use **【▶】** button to enter the sub menu;

·You can use **MENU** or **EXIT** button to save and return back to the previous menu .

·Use **【▲】** / **【▼】** button to select the option and then press **【◀】** / **【▶】** to adjust the value in the sub menu;

First Time Installation



If this is the first time you turn on the TV and there is no TV programs memory ,there will display **First Time Installation** menu on screen just as the following picture. A screen will display asking you to run a Channel Auto Scan to search and receive available local channels. And the channels will be stored in the TV tuner.

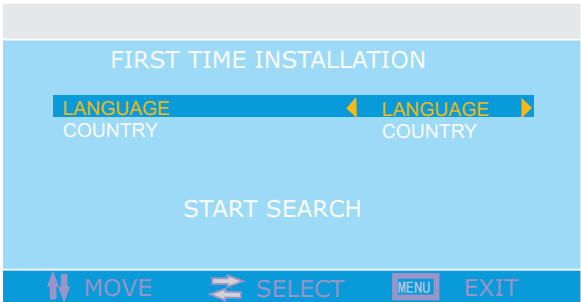

·Use down [▼] arrow button to highlight LANGUAGE. Navigate using [◀] / [▶] arrow button to select the OSD language. There are 6 language for selection: ENGLISH, GERMAN, FRENCH, SPANISH, ITALIAN, PORTUGUESE.


·Use down [▼] arrow button to highlight COUNTRY. Navigate using [◀] / [▶] arrow button to select the country. There are 6 country for selection: UK, ITALY, SPAN, FRANCE, GERMANY, OTHER,.

  After setting these items, you can press MENU to give up your installation and exit. Or press [▼] / [▲] button to highlight START SEARCH and then press [▶] button, the Auto Search will begin as the following picture:

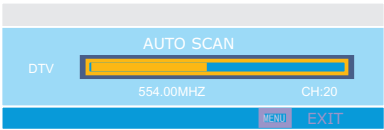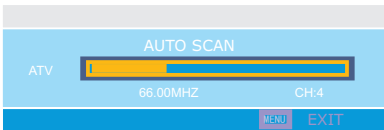

Channel List

 
·Use down [OK] button to call out the CHANNEL LIST.

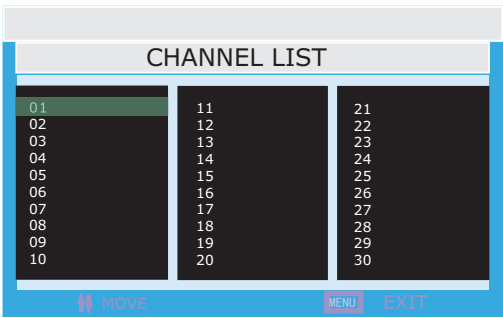

TV Information

Program Information

 Press **[DISPLAY]** button to display program information.



1. Current Channel Number.
2. The colour system of current program, could be changed on **Manual Tuning** menu(an option of **SETUP** menu).
3. Current program name.
4. The sound system of current program, could be changed in **Manual Tuning** menu(an option of **SETUP** menu).
5. The NICAM mode of current program.



If the icon of NICAM mode is red, it means the current program supplies multiple NICAM signals, and you can change it by pressing **NICAM** button.

Four kinds of NICAM modes and relative icons:



Mono



Stereo



Dual I



Dual II

 
PICTURE

The **PICTURE** menu offers options to enhance and refine the picture displayed on your TV based on ambient room light and personal preferences. Adjustment options include **PICTURE MODE**, **CONTRAST**, **BRIGHTNESS**, **COLOR**, **TINT**, **SHARPNESS**, **COLOR TEMP.** and **NOISE REDUCTION**.

How to Navigate:

Press the **MENU** button on the remote control. Navigate using **[◀] / [▶]** arrow buttons to select **PICTURE**. Press the down **▼** arrow button to highlight **PICTURE MODE**, then press the **[◀] / [▶]** arrow button to select your viewing preference from 4 factory options: **STANDARD > MOVIE > VIVID > PERSONAL**.

The **STANDARD** setting is recommended for most viewing environments. Depending on the ambient light level in the room, you may find one of the other options more pleasing.

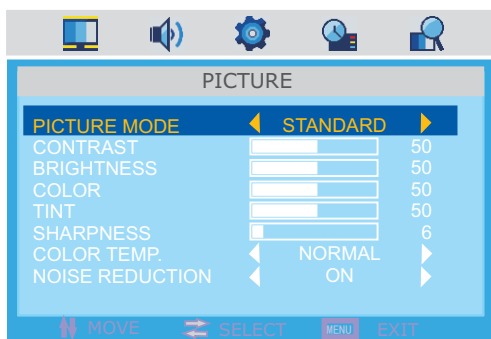

To make more critical adjustments based on your own preferences in **PERSONAL**:

 
- Use down **【▼】** arrow button to highlight CONTRAST. Navigate using the **【◀】 / 【▶】** arrow buttons to increase or decrease contrast intensity.
- Use down **【▼】** arrow button to highlight BRIGHTNESS. Navigate using the **【◀】 / 【▶】** arrow buttons to increase or decrease overall brightness.
- Use down **【▼】** arrow button to highlight COLOR. Navigate using the **【◀】 / 【▶】** arrow buttons to increase or decrease color intensity.
- Use down **【▼】** arrow button to highlight TINT. Navigate using the **【◀】 / 【▶】** arrow buttons to adjust colors toward green or reddish tint.
- Use down **【▼】** arrow button to highlight SHARPNESS. Navigate using the **【◀】 / 【▶】** arrow buttons to soften or view crisper edges in the picture.
- Use down **【▼】** arrow button to highlight COLOR TEMP.. Navigate using the **【◀】 / 【▶】** arrow buttons to select COOL (more bluish tone), NORMAL or WARM. The default setting is NORMAL.
- Use down **【▼】** arrow button to highlight NOISE REDUCTION. Navigate using the **【◀】 / 【▶】** arrow buttons to select it ON or OFF.

SOUND

The **SOUND** menu offers options to make sound enhancements while listening through the built-in speakers

How to Navigate:

Press the **MENU** button on the remote control. Navigate using **【◀】 / 【▶】** arrow buttons to select **SOUND**. Press the **【▼】** arrow button to highlight **SOUND MODE**, then press the **【◀】 / 【▶】** arrow button to select your sound preference from 4 factory options: **STANDARD > MOVIE > MUSIC > PERSONAL**.

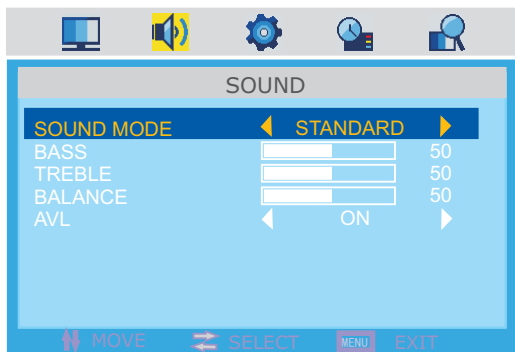

To make more critical sound adjustments based on your own preferences in **PERSONAL**:

 
- Use down **【▼】** arrow button to highlight Bass. Navigate using the **【◀】 / 【▶】** arrow buttons to increase or decrease low frequency intensity.
- Use down **【▼】** arrow button to highlight TREBLE. Navigate using the **【◀】 / 【▶】** arrow buttons to increase or decrease high frequency intensity.
- Use down **【▼】** arrow button to highlight BALANCE. Navigate using the **【◀】 / 【▶】** arrow buttons to adjust sound towards the left or right speaker.
- Use down **【▼】** arrow button to highlight AVL. Navigate using the **【◀】 / 【▶】** arrow buttons to select it ON or OFF.

SETTING

In the **SETTING** menu you may change the initial set up of preferences that include LANGUAGE, OSD TIMER, TRANSPARENCE, OVERSCAN, and RESET your TV back to its factory default status.

How to Navigate:

Press the **MENU** button on the remote control. Navigate using arrow **【◀】** / **【▶】** buttons to select SETTING. Gain access to display options by pressing the down **【▼】** arrow button to highlight LANGUAGE or other options, then press **【◀】** / **【▶】** arrow buttons on your remote to select.

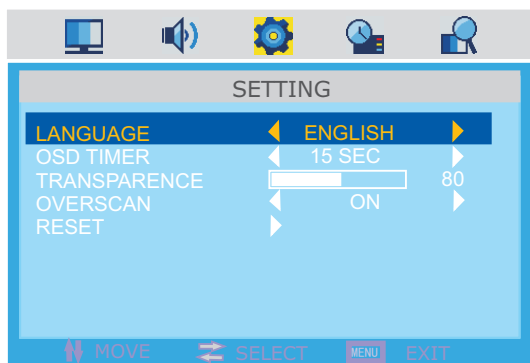

·Use down **【▼】** arrow button to highlight LANGUAGE. Navigate using **【◀】** / **【▶】** arrow button to select the OSD language. There are 6 language for selection: ENGLISH > GERMAN > FRENCH > SPANISH > ITALIAN > PORTUGUESE.

·Use down **【▼】** arrow button to highlight OSD TIMER. Navigate using **【◀】** / **【▶】** arrow button to select the OSD timer. There are 6 modes for selection: 5 SEC > 10 SEC > 15SEC > 20SEC > 25 SEC > 30 SEC.

·Use down **【▼】** arrow button to highlight TRANSPARENCE. Navigate using **【◀】** / **【▶】** arrow button to select the transparency of the OSD.

·Use down **【▼】** arrow button to highlight OVERSCAN. Navigate using **【◀】** / **【▶】** arrow button to select it ON or OFF. But this option is only available in the HDMI source.

 
·Use down **【▼】** arrow button to highlight RESET. Navigate using **【▶】** arrow button to reset the options in the SETTING menu.

FUNCTION

In the **FUNCTION** menu you may change the function set up of preferences that include SLEEP TIMER, ASPECT, TT LANGUAGE, BLUE SCREEN, SYSTEM LOCK and FTI.

How to Navigate:

Press the **MENU** button on the remote control. Navigate using arrow **【◀】** / **【▶】** buttons to select FUNCTION. Gain access to display options by pressing the down **【▼】** arrow button to highlight SLEEP TIMER or other options, then press **【◀】** / **【▶】** arrow buttons on your remote to select.

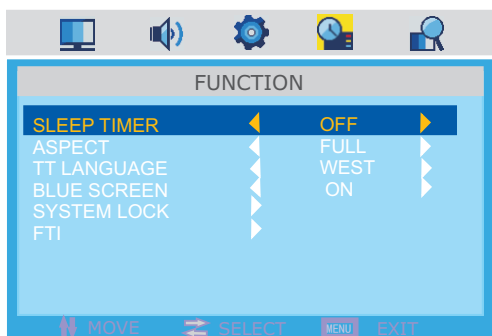


·Use down [▼] arrow button to highlight SLEEP TIMER. Navigate using [◀] / [▶] arrow button to select the sleep timer, and the TV will turn off automatically in the setting time . There are 9 modse for selection: 15 Min>30 Min> 45 Min> 60 Min> 75 Min> 90 Min> 105 Min> 120 Min> OFF.

·Use down [▼] arrow button to highlight ASPECT. Navigate using [◀] / [▶] arrow button to select: FULL> ZOOM > SUBTITLE > 4:3>14:9>AUTO. The default setting is FULL. .

·Use down [▼] arrow button to highlight BLUE SCREEN. Navigate using [◀] / [▶] arrow button to select this option ON or OFF.

 ·Use down [▼] arrow button to highlight SYSTEM LOCK. Navigate using [▶] arrow button to select this option. Enter your 4 digit code (factory default code is "0000") unless previously changed to enter the submenu.

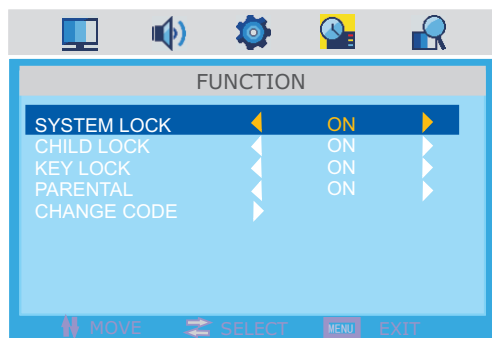

·Use down [▼] arrow button to highlight SYSTEM LOCK. Navigate using [◀] / [▶] arrow button to select this option ON or OFF. When set the system lock OFF, the locks below will be unavailable.

·Use down [▼] arrow button to highlight CHILD LOCK. Navigate using [◀] / [▶] arrow button to select this option ON or OFF. When set the child lock ON, the program locked in the PROGRAM EDIT can not be displayed.

 
·Use down [▼] arrow button to highlight KEY LOCK. Navigate using [◀] / [▶] arrow button to select this option ON or OFF. When set the key lock ON, the key can not work.

·Use down [▼] arrow button to highlight CHANGE CODE. Navigate using [▶] arrow button to change the password of the system lock. A dialog as above will appear, the enter the new password can change the password successfully.

·Use down [▼] arrow button to highlight CHANGE CODE. Navigate using [▶] arrow button to select this option ON or OFF.

·Use down MENU button to return to the main menu, then use down [▼] arrow button to highlight FTI. The operation can be referred to page 5.

·Use down 【▼】 arrow button to highlight MANUAL SEARCH. Navigate using 【▶】 arrow button to select it.

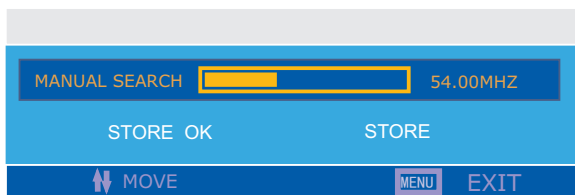

·Use down 【▼】 arrow button to highlight AFT. Navigate using 【◀】 / 【▶】 arrow button to select this option ON or OFF.

 
·Use down 【▼】 arrow button to highlight FINE. Navigate using 【▶】 arrow button to select this option.



·Use down 【▼】 arrow button to highlight SKIP. Navigate using 【◀】 / 【▶】 arrow button to select this option ON or OFF.

·Use down 【▼】 arrow button to highlight OVER MODULATION. Navigate using 【◀】 / 【▶】 arrow button to select this option ON or OFF.

·Use MENU button to return to the main menu, then use down 【▼】 arrow button to highlight PROGRAM EDIT. Navigate using 【▶】 arrow button to enter the submenu.

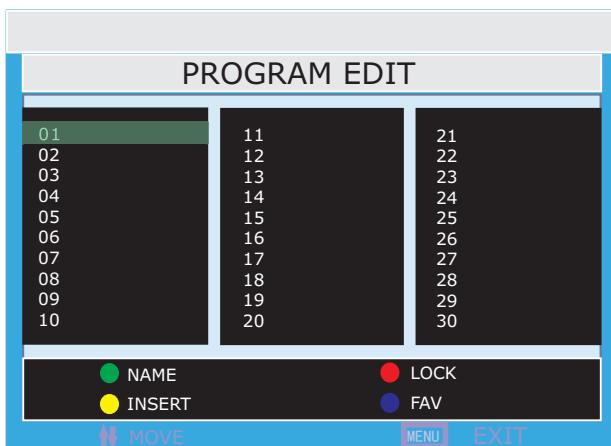

This option has four functions.

·Use Green button and the 【▲】 / 【▼】 arrow button to name the current channel.

·Use Yellow button to insert the current channel.

·Use Red button to set the current channel to lock. if the current channel already lock, press blue button again will unlock.

 
·Use Blue button set the current channel to your favorite channel. if the current channel already be one of your favorite channel, press Blue button again will set it to a normal channel.

CHANNEL

In the **CHANNEL** menu you may change the channel set up of preferences that include COUNTRY, AUTO SCAN, MANUAL PROGRAM and PROGRAM EDIT.


How to Navigate:

Press the **MENU** button on the remote control. Navigate using arrow **【◀】 / 【▶】** buttons to select CHANNEL. Gain access to display options by pressing the down **【▼】** arrow button to highlight COUNTRY or other options, then press **【▶】 / 【▶】** arrow buttons on your remote to select.

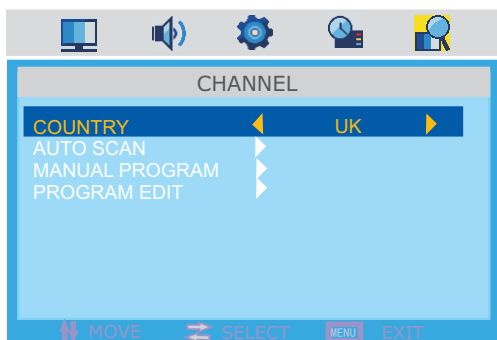

·Use down **【▼】** arrow button to highlight COUNTRY and AUTO SCAN. The operation of these two options can be referred to page 5.

 ·Use down **【▼】** arrow button to highlight MANUAL PROGRAM. Navigate using **【▶】** arrow button to enter the submenu.

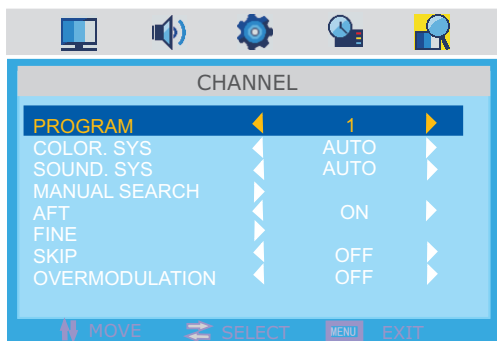

·Use down **【▼】** arrow button to highlight PROGRAM. Navigate using **【▶】 / 【▶】** arrow button to select the program that you want to watch.

·Use down **【▼】** arrow button to highlight COLOR. SYS. Navigate using **【▶】 / 【▶】** arrow button to select the color system: AUTO>PAL> SECAM.

·Use down **【▼】** arrow button to highlight SOUND. SYS. Navigate using **【▶】 / 【▶】** arrow button to select the sound system: B/G> D/K> L> LL.

 
PICTURE

The **PICTURE** menu offers options to enhance and refine the picture displayed on your TV based on ambient room light and personal preferences. Adjustment options include PICTURE MODE , CONTRAST , BRIGHTNESS and COLOR.

How to Navigate:

Press the **MENU** button on the remote control. Navigate using **【◀】 / 【▶】** arrow buttons to select **PICTURE**. Press the down **▼** arrow button to highlight **PICTURE MODE**, then press the **【◀】 / 【▶】** arrow button to select your viewing preference from 4 factory options: **STANDARD > MOVIE > VIVID > PERSONAL**.

The **STANDARD** setting is recommended for most viewing environments. Depending on the ambient light level in the room, you may find one of the other options more pleasing.

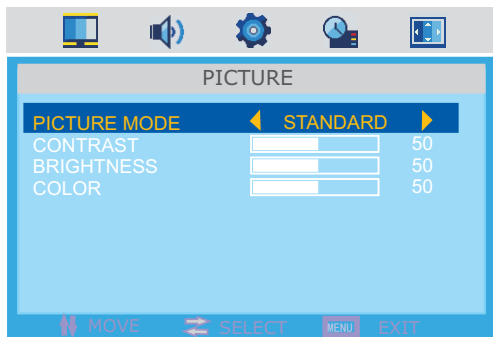

To make more critical adjustments based on your own preferences in **PERSONAL**:

- Use down **【▼】** arrow button to highlight **CONTRAST**. Navigate using the **【◀】 / 【▶】** arrow buttons to increase or decrease contrast intensity.
- Use down **【▼】** arrow button to highlight **BRIGHTNESS**. Navigate using the **【◀】 / 【▶】** arrow buttons to increase or decrease overall brightness.
- Use down **【▼】** arrow button to highlight **COLOR**. Navigate using the **【◀】 / 【▶】** arrow buttons to increase or decrease color intensity.

 
PC SETUP

The **PC SETUP** menu is just for the **PC Mode**.

In the **PC SETUP** menu you may change the channel set up of preferences in **PC MODE** that include **H-POSITION** , **H-POSITION** , **CLOCK** , **PHASE** and **AUTO ADJUST**.

How to Navigate:

Press the **MENU** button on the remote control. Navigate using arrow **【◀】 / 【▶】** buttons to select **PC SETUO**. Gain access to display options by pressing the down **【▼】** arrow button to highlight **H-POSITION** or other options, then press **【◀】 / 【▶】** arrow buttons on your remote to select.

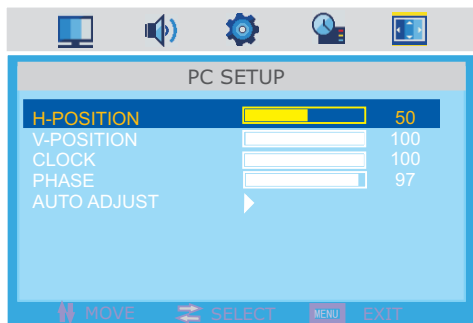

·Use down [▼] arrow button to highlight H-POSITION. Navigate using [◀] / [▶] arrow button to select the H-POSITION.

·Use down [▼] arrow button to highlight V-POSITION. Navigate using [◀] / [▶] arrow button to select the V-POSITION.

·Use down [▼] arrow button to highlight CLOCK. Navigate using [◀] / [▶] arrow button to select the CLOCK.

·Use down [▼] arrow button to highlight AUTO ADJUST. Using [▶] arrow button to auto adjust the options above. V-POSITION.

- Notes:** 1. SOUND menu and description are the same as that for TV mode.
2. SETTING menu and description are the same as that for TV mode.
3. FUNCTION menu and description are the same as that for TV mode .

HELP

No Power	Check the AC cord of TV is plus in or not. If still no power, please Pull out the plug and replug in after 60 seconds. And open the TV again.
Signal receive not properly	To cause double image or phantom if there has high building or high mountain round -TV. You can adjust image effect by manually operation: consult instruction of vernier regulation or change the direction of external antenna. If you use the indoor antenna . under certain circumstance, receive will be more difficult . So you can change the direction of the antenna to adjust the image effect . If can't change image receiving effect either , you have to use external antenna.
No picture	Check the antenna at the back of TV is connected properly or not. Try to select other channels and check whether the TV problem itself or not.
Video is ok ,but without audio	Increase the volume. Check the TV is in mute mode or not , and please press the mute button to make sound resume.
Audio is ok, but color error or no picture.	Increase contrast and brightness.
snow statics picture and noise	Check the antenna at the back of TV is connected or not .
Level broken line	Maybe has electrical appliance interfere, such as hair drier, vacuum cleaner and so on, please turn off these kinds of electrical appliance.
Dual-Image or "simulacrum" The TV no response with the Remote.	Perhaps the location for the antenna is not good.Use the tall beamed antenna can improve quality of the display image. Operate the remote direct to the remote sensor on the TV. If still no response for the TV, please check if the plastic bag is on the remote take or not. And check if the location for the battery is correct. Change the new battery. The TV will shift to the STAND BY if no response from the remote in a few minutes.
NO Video In. (PC Mode)	Please check if the display cable connect to the VGA correct. Please check if there has the bend on the display cable.
Vertical twinkling (PC Mode)	Enter the main menu, Use the clock regulator for the Video display noise to eliminate the vertical line.
horizontal ripping (PC Mode)	Adjust the Audio sound horizontal in the main menu to clear the horizontal ripping line.
The screen is too bright or too dark (PC Mode)	Adjust the contrast ratio or brightness in the main menu.
PC Function no response	Check the computer setting in the state of compatible display resolution
Ripping line in RCA connecting	Please use good quality connecting cable.
Problem still exist	Unplug the power cable and wait for 30 seconds, then connect. If there is some problem with our TV, do not repair it by yourself, please contact with the customer service center.

Note: There will be complete picture and the brightness will come down if the TV is in the static picture for too long time, So please do not keep the TV in a state of same Menu or same picture that has much difference in brightness and contrast ratio for too long time.

SPECIFICATIONS

Screen Size	15"
TV system	PAL SECAM AUTO
Video system	PAL/NTSC
Input/Output	VGA, HDMI input, AV input, PC input, ANT 75 Ω
Speaker Output	4 Ω 5W
Power requirement	AC 100–240V \sim , 50/60Hz
Power consumption	<36W
Accessories	User's manual Remote controller Power cord 2 x AAA Batteries

Screen Size	17"
TV system	PAL SECAM AUTO
Video system	PAL/NTSC
Input/Output	VGA, HDMI input, AV input, PC input, ANT 75 Ω
Speaker Output	4 Ω 5W
Power requirement	AC 100–240V \sim , 50/60Hz
Power consumption	<48W
Accessories	User's manual Remote controller Power cord 2 x AAA Batteries

NOTE:

This user manual is for reference only. Specifications are subject to change without notice.

Model: 1501 1701

CB CE

